Kevinleo Scent Machine Handbook

Company Introduce

Kevinleo scent specialize in scent machine producer and marketing all over the world with 7 years, and have factory with 1,500-2,000m2 area. wide production range with 100-10,000m3 coverage area, remoter control, wifi. timer control way....

Many smell available, like lavander, hotel, white tea,..., it will ship by fedex with 4-6 deliver time.

Wholesale business acceptable with favorable price; ODM/OEM/Logo accept with small quantity.

Distributor partner acceptable.

Operation Steps

1. Connect to power adapter

Connect the power adapter with 220V /110v power socket, press "Turn on" button if machine has.

2. Set up work time

The Fragrance Device is to be set 4 work periods, also can be allowed to choose the workdays according to users' requirements.

[MODE]: to change from one event to another event.

[SET]: By pressing it, hour/minutes/days will flash, which one you want

 
adjust, just make it flash

[UP]: Only when hour/minutes/days flash, it will increase by pressing it [DOWN]: Only when hour/minutes/days flash, it will reduce by pressing it

A. Set up your local Time

very important: need connect power well and have time on pannel. if your local time:8:10 am monday

- 1. press "SET" button till Hour flash
- 2. Press "UP" till hour 8 appear.
- 3. press "SET" till minutes flash.
- 4. Press "UP" till minutes 10 appear
- 5. press "SET" till day flash.
- 6. Press "UP" till day monday appear,



B. Set up work time

- 1) Press [MODE] for the first time, LCD screen displays [EVENT 1 ON], press [SET] to adjust the on time of first operation period. Press [UP/DOWN] to adjust the hour, minutes and work days. (Repeat the operation from [SET] to [UP/DOWN]. We first set the hour, then minutes then work days.)
- (2) Press the [MODE] for the second time,LCD screen displays [EVENT 1 OFF], press [SET] to adjust the off time of first operation period. Press [SET] to let the hour/min/days flash,then adjust the hours, minutes by pressing [UP/D OWN]

(3) Press the [MODE] for the third time,LCD screen displays [scent work], press [UP] to adjust continouse work time 5-300s

(4) Press the [MODE] for the third tme, LCD screen displays [scent pause] press [UP] to adjust continouse pause time 5-300s

Remarks:

To set more operation periods, repeat the above steps. The fragrance delivery device is allowed to set 4 operation periods.

- 1 When setting the work period, the close time is not allowed to be set before the open time.
- 2 If the working period need to cross the '00:00' point, it will need to set two working periods separately.

[Work day choice]: to set the work days

- 1) From Monday to Wednesday
- 2 From Tuesday to Thursday
- 3 From Monday to Friday
- 4 Weekends
- 5 From Monday to Saturday
- 6 From Monday to Sunday
- 7 Monday
- 8 Tuesday

- Wednesday
- 10 Thursday
- 11) Friday
- 12 Saturday
- 13) Sunday
- 14 Monday, Wednesday, Friday
- (15) Tuesday, Thursday, Saturday

C. Set up Concentration Time

After work time setting ends, press [MODE] butt on until the LCD screen displa ys [SCENT WORK]. press "UP" or "DOWN" button to 5,or 10,...300s you need;

Continue pressing [MODE], until the LCD screen displays [SCENT PAUSE], press "UP" or "DOWN" button to 5,or 10,...300s you need;

Moto

[scent work] mean continuous work. [SCENT PAUSE] means continous pause

Lets do sample

If you are from new york with 8:00 monday now. please do follow to adjust local time firstly.

1. press "SET" button till hour firgure flash. then press "UP" to hour into 8; press "SET" till minutes flash, then then press "DOWN" to minutes into 0; press "SET" button till days firgure flash. then press "UP" to choose Monday

Sample 1: Work time you want: 8:00 am-18:00 pm from monday to friday Density time: 5s work.200s pause

- A. press "MODE" till "EVENT 1 ON " flash, then press "SET" button till Hour Firgure flash, at this time, press "UP" button to increase hour to 8; Now press "SET" button till minutes firgure flash, then press "DOWN" to reduce minutes to 0, do same to make days from monday to friday.
- B. Press "MODE" again till "EVENT 1 OFF" flash, press" SET' button to hour flash, then press" DOWN " to adjust hour into 18,and press" SET" till minutes flash, press "DOWN" till 0 show.
- C. Press "MODE" again till "SCENT WORK" flash.then press "DOWN" till 5 show, then press "MODE" till "SCENT PAUSE" flash, then press "UP" till 200 show.

Note: machine will work now, and will work from monday to friday

Sample 2: Work time you want:11:00-15:00, day is monday and friday; Density time:20s work. 210s pause

- A. press "MODE" till "EVENT 1 ON " flash, then press "SET" button till Hour Firgure flash, at this time, press "UP" button to increase hour to 11; Now press "SET" button till minutes firgure flash, then press "DOWN" to reduce minutes to 0, do same to choose only monday and friday
- B. Press "MODE" again till "EVENT 1 OFF" flash, press" SET' button to hour flash, then press" DOWN " to adjust hour into 15,and press" SET" till minutes flash, press "DOWN" till 0 show.
- C. Press "MODE" again till "SCENT WORK" flash.then press "DOWN" till 20show, then press "MODE" till "SCENT PAUSE" flash, then press "UP" till 210 show.

Note: machine will work after 3hour(at 11am), and only work at monday and friday

Important:

- 1. machine only work when your local time is within work time(Event 1 on-Event 1 off)
- 2. "Monday" "friday" show on display,it is not work from monday to friday. only work at monday and friday
- 3. If want reduce oil consuption per day, please adjust density time with 5s work, 200s pause or 300s pause.
- 4. "PAUSE OFF" appear on pannel when no touch display, that means your local time is not within work time NOW.
- 5. "PAUSE ON" apperar on pannel when no touch display, that means your machine is pause according to Density time you set.
- 6. SCENT ON" apperar on pannel when no touch display, that means your machine is working according to Density time you set.

Do maintaince

Because oil will leave in atomizer head inside when working, and block it, we need do clearance about 15-20 days per time, or you found small scent come out.

Step 1: Add much alcohol into bottle

Step 2: Let machine work about 15-20min

Step 3: pour alcohol away

Problem & Solution

- 1. No scent come out, no time on pannel Solution: please try to connect adapter again, if still not, pls change another
- 2. No scent come out, have time on pannel. no noise Solution: your local time is not within work time(event 1 on Event 1 off).
- 3. No scent come out, have time on pannel. have noise Solution: A. please check if oil is enough
 - B. please check if it tighten well between bottle and atomizer head
 - C. please check joint connector tighten well
 - D. Please put finger block scent outlet for 5s to feel if it leak air. if no leak air, that means your oil block atomizer head hole, need do maintaince as above
- 4. Have noise, however scent out become small then before. Solution: A. please check if your oil is pure oil or buy kevnleo oil for try
 - B. please do maintance as above methods.

After-Service

Any question, please contact us with follow information request for fast solution 1.

try to do like above "problem & solution"

- 2. please offer us photos/video to clarify problem with your order ID/Invoice No.
- 3. send us after-service team: sale@kevinleoscent.com