


Thanks for your order kevinleo scent machine, kevinleo scent is professional on scent machine production 8 years and 5 years experience on scent marketing in US, any problem you meet, please contact us directly. we will fix problem within 10-20min. (After-service: sale@scent-master.com)


Step 1: Set up your country time

Keep same time with your country  
( Sample time : 9:03 am Tue )

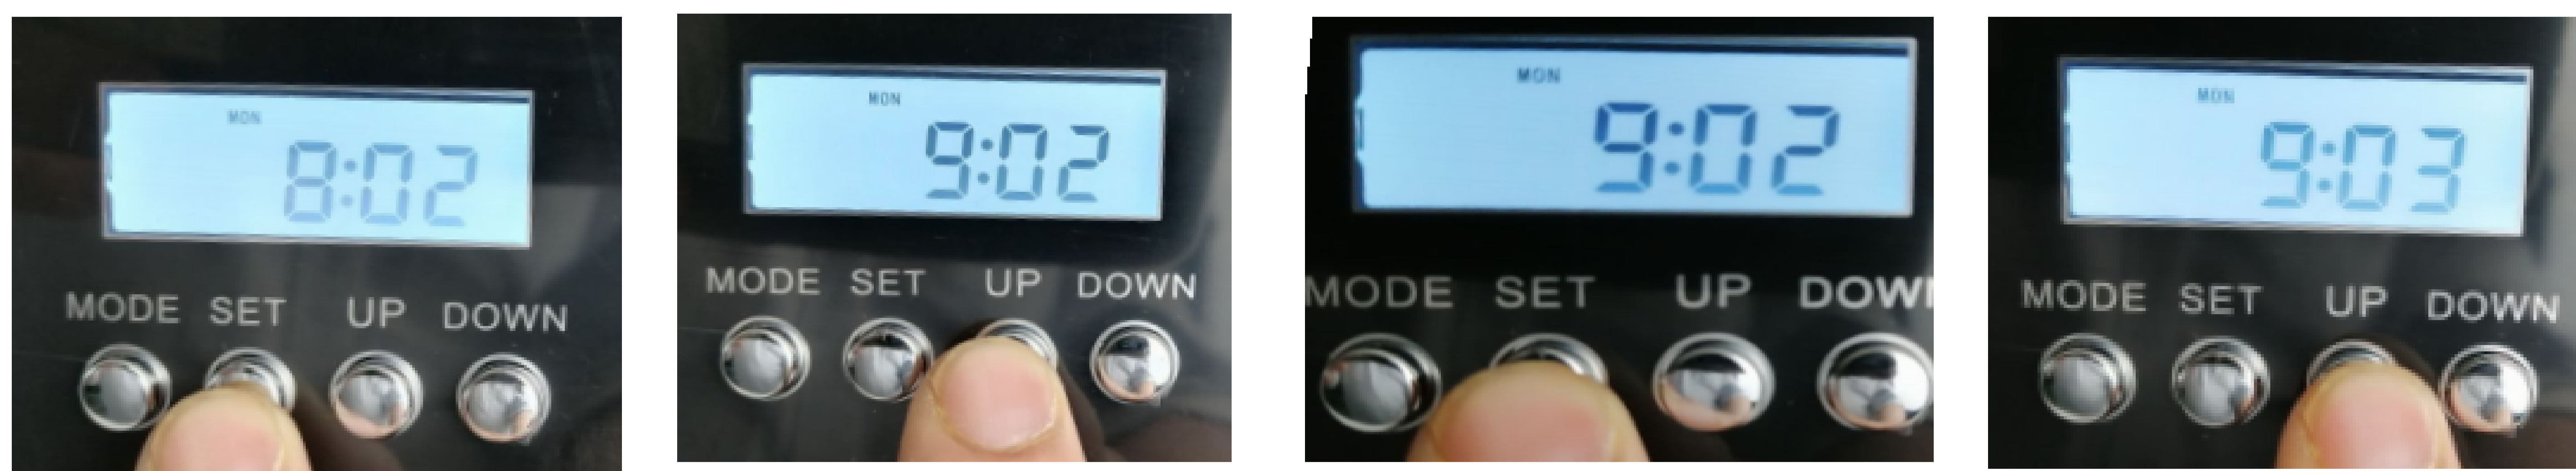

1.1. press "SET" till HOUR flash, then press "UP"/"DOWN" to adjust hour

1.2. Press "SET" till MINUTES flash, then press "UP" /"DOWN" to adjust minutes

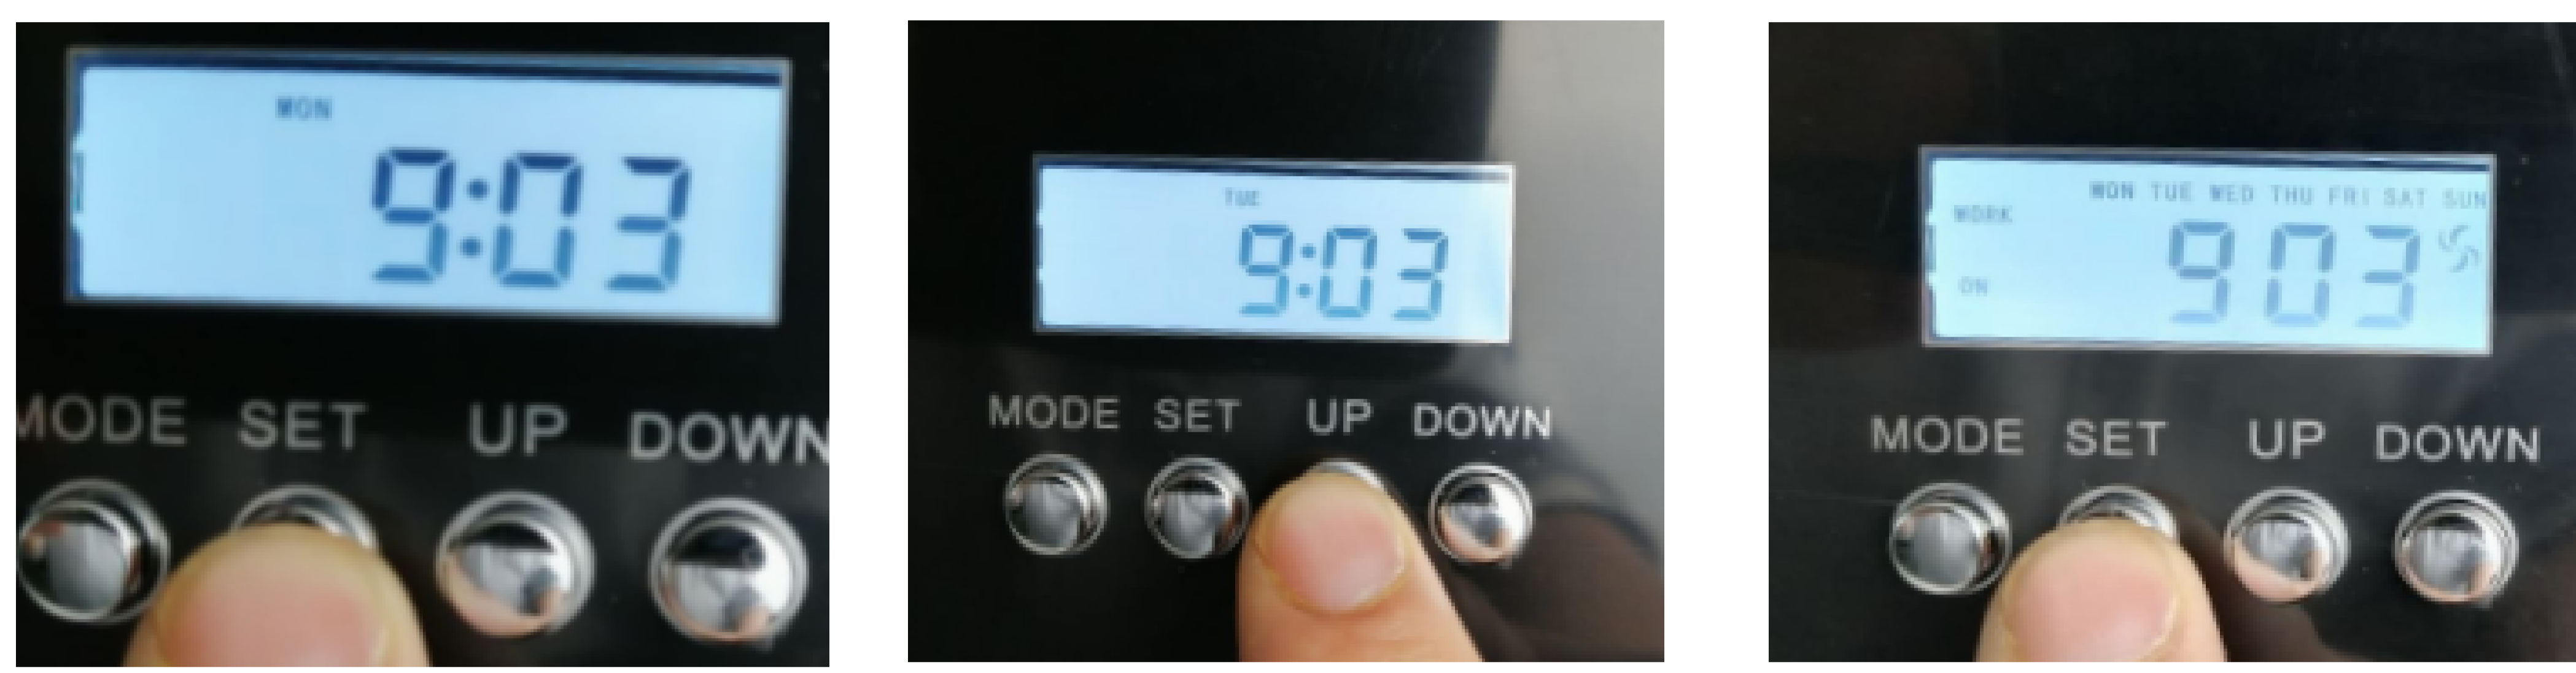

1.3. Press "SET" till Day flash, then press "UP" /"DOWN" to adjust day

1.4. Save your setting by press "SET" again  
( MOST IMPORTANT )

Step 2: Set up Work time

Introduce for page show:

Event 1 on: The Time of machine start working

Event 1 off: The time of machine stop working

Work Event 1: Time of machine work continuously

Pause Event 1: Time of machine pause continuously

Note:

1. Time (Event 1 on- Event 1 off): 0:01-23:59

2. 5-300 seconds for work event 1/pause event 1

( MOST IMPORTANT )

SAMPLE FOR WORK TIME

work time as follow with right photos  
9:01-23:01 Tue/Thr/ Fri / Sat / Sun

Event 1 on: 9:01  
Event 1 off: 23:01

Work event 1: 10s

Pause Event 1: 165s



2.1 : Press "MODE" till above page "EVENT 1 ON" show

2.2: Press "SET" till hour flash, then press "UP"/"DOWN" button to adjust HOUR

2.3: Press "SET" till minutes flash, then press "UP"/"DOWN" button to adjust MINUTES



2.4. Press "SET" till Days flash

2.5: Press "UP" till days (you want remove/add) flash, then press "DOWN", let the DAYS shown (you want machine work)  
( MOST IMPORTANT )



2.6: Press "MODE" till above page "EVENT 1 OFF" show

2.7: Press "SET" button till hour flash, and then press "UP" button to adjust hour

2.8: Press "SET" button till Minutes flash, and then press "UP" button to adjust minutes



2.9: Press "MODE" till above above page show "WORK EVENT 1", then press "UP" to adjust

2.10: Press "MODE" till above above page show "PAUSE EVENT 1", then press "UP" to adjust

Step 3: Set up other work interval if need

If you want machine work with above 1 work time, you can set up time on event 2,3,4,5, totally same operation like step 2.



3.1 Press "MODE" till above page show. if you want set up other work interval, you can press "SET" button to adjust, same operation (2.1--2.10) in step 2

3.2: Press "MODE", we can see photos above, other work interval like step 2, all included event on/off/ work event / pause event; If no need set more work interval, just press "MODE" till country time

Some problem & solution

Once you set up all time, machine still no work. please check if your country time is within your work time or not. when no touch display, 2 photos as follows

Show "PAUSE ON" mean your machine is on time of Pause Event 1 (See 2.10 in setp 2). When time ends, it will start work again.

If you want machine work all the time, (please increase time into 300s on 2.9 in step 2; less time into 5s on 2.10 in Step 2)



Show "OFF" means your country time is not within your work time  
Your country time = time shown no touch  
Your work time = Event 1 on - Event 1 off

If you want machine work all the time,

-Please set up time 0:01 on event 1 on; 23:59 on event 1 off; 300 on work event, 5 on pause event



Note: if you still do not know how to set up time, please let me know, we will make new video according to work time you need, you just do step by step like our new video show.

# How to connect hvac system



Drill hole and then put tube side,then seal hole

HVAC duct

Plastic tube ( provided,about 1.2m)

Joint connector (Provided)  
*Take out tube like this photos*

Kevinleo scent machine



*One hand press black round,another hand take out tube easily*

## *Some tips:*

- 1. if you want scent machine work together with your hvac system (central air conditioner),pls set up same work time for them*
- 2. No need to turn on fan (near power jack) if connect hvac system,*
- 3. If you do not have hvac system, you can stand freely and open fan to deliver scent into much area*

# How to calculate oil consumption

Time on display




Time of Event 1 work



Time of Event 1 pause

Time on App

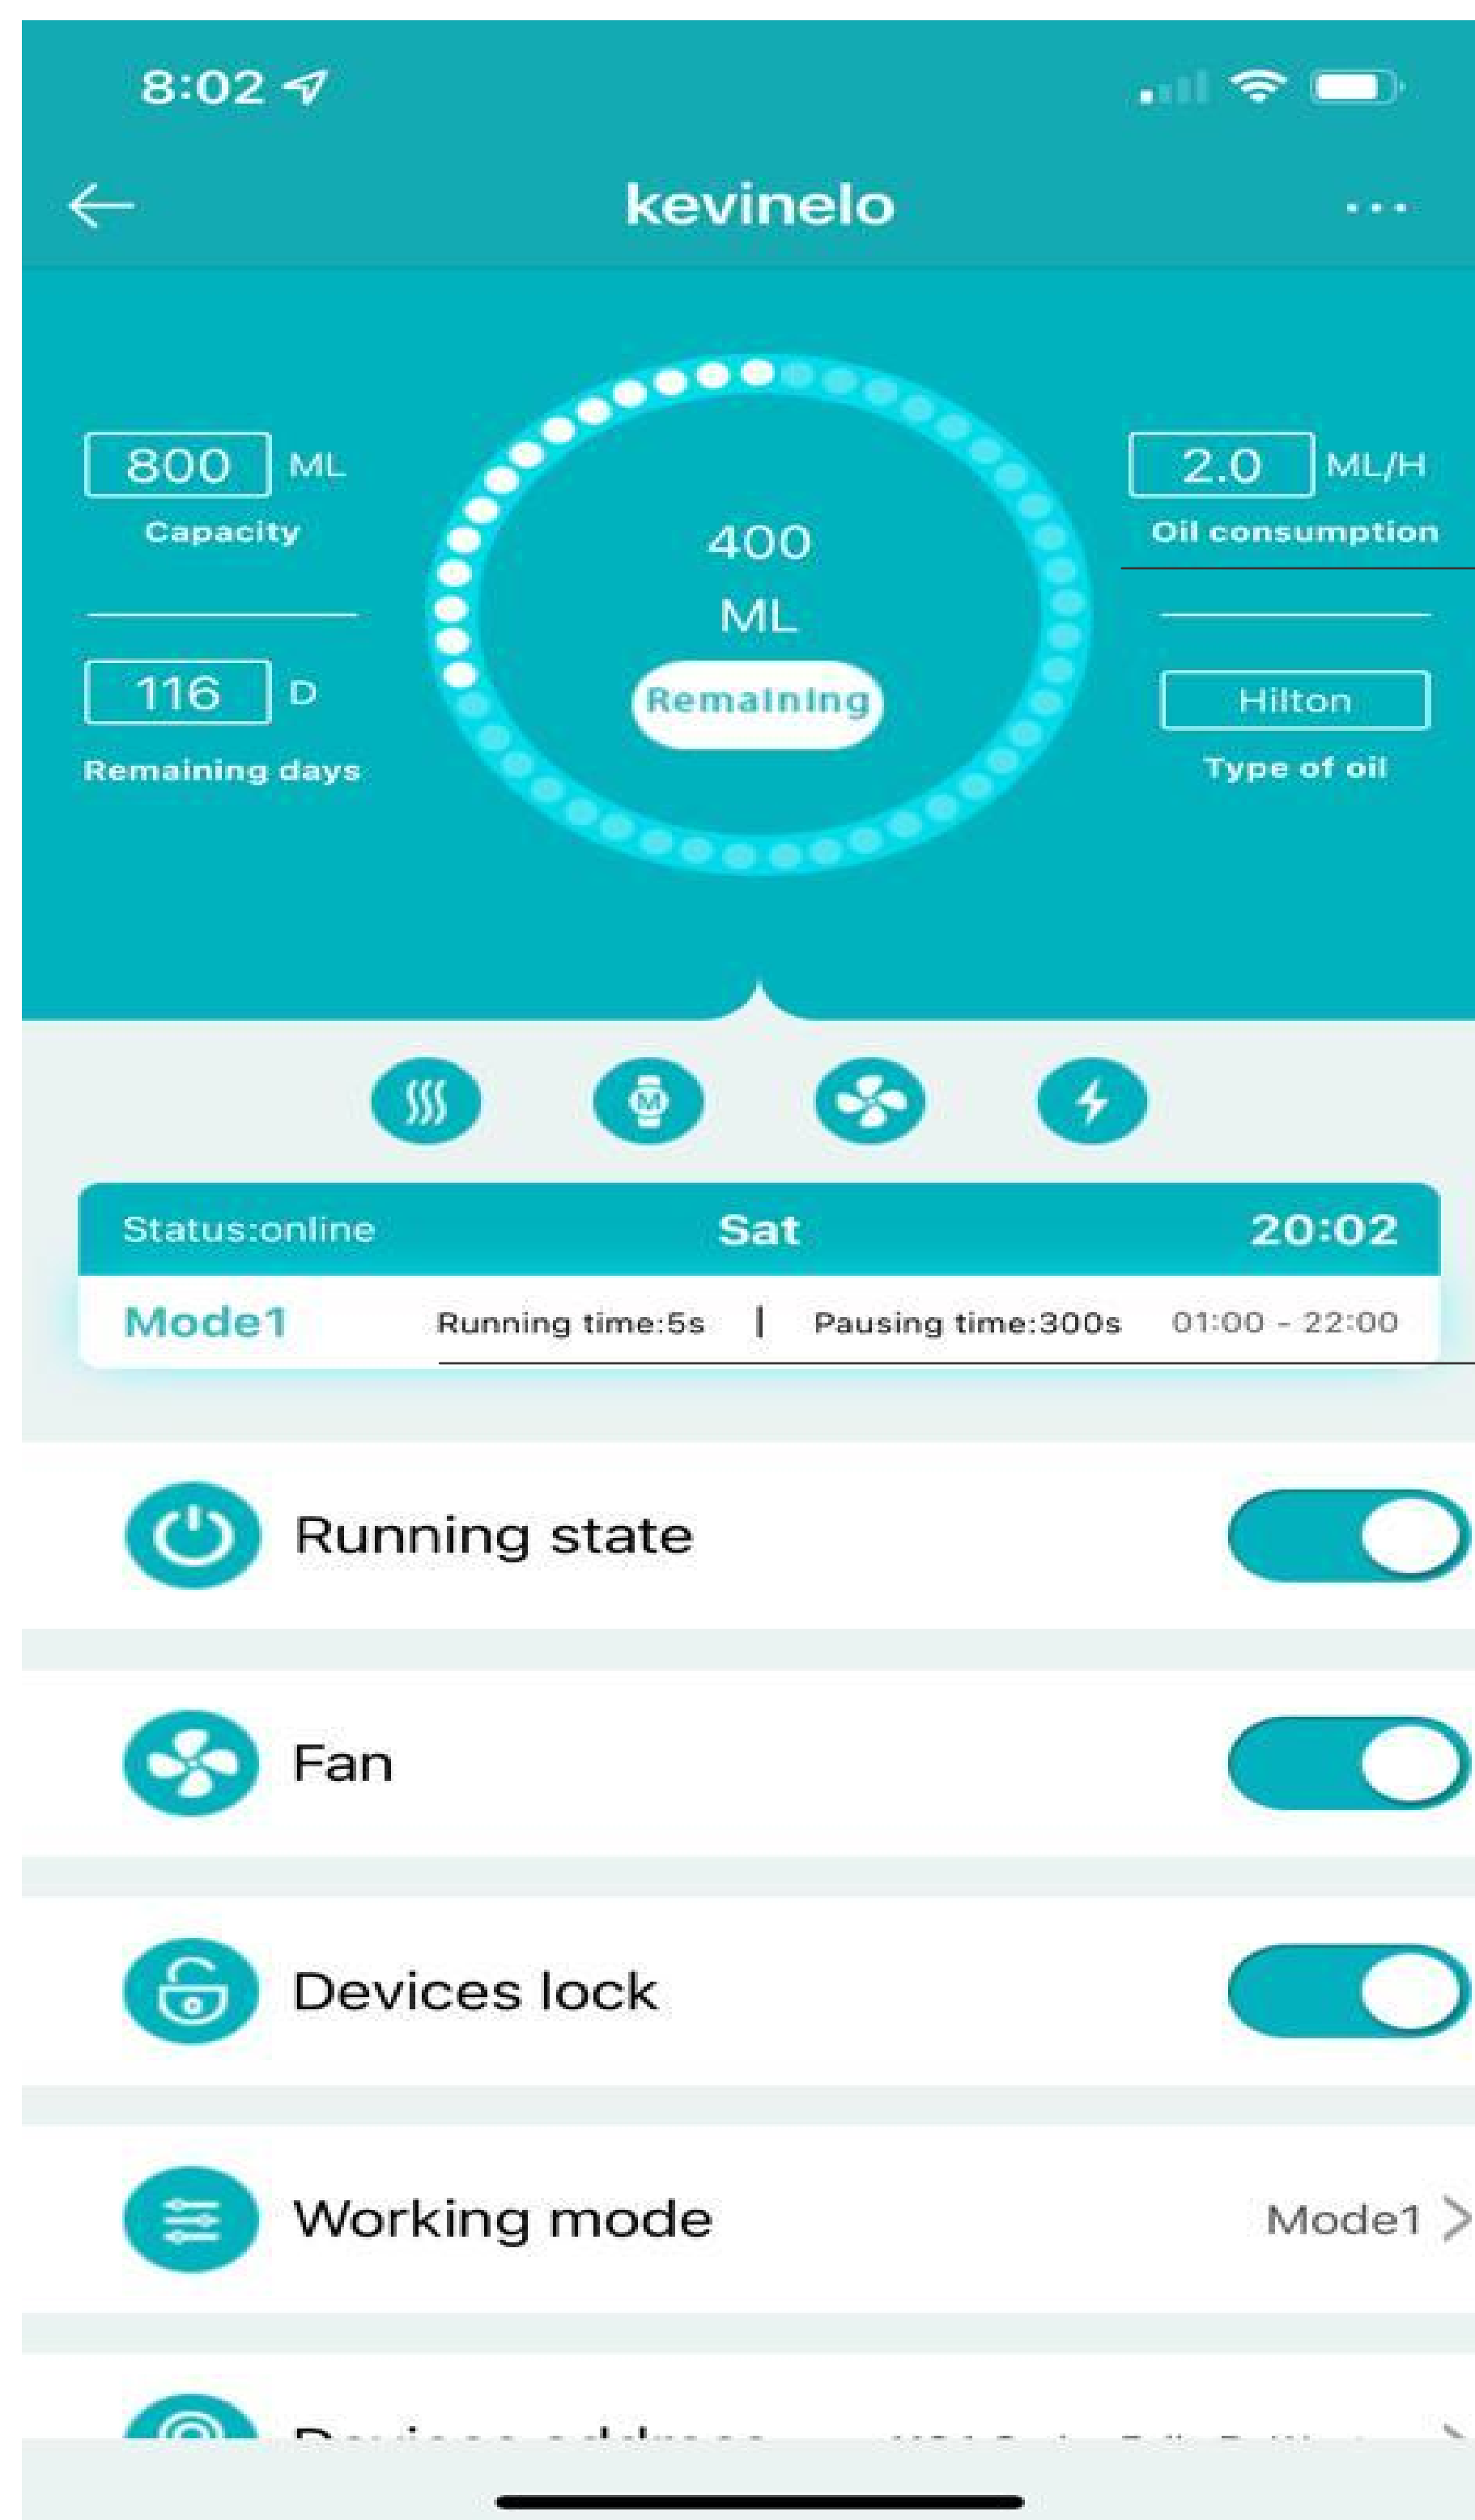

Oil consumption

Running time = Time of event 1 work  
pause time = Time of event 1 pause

$$\text{Oil consumption} = \text{Running time} / (\text{running time} + \text{pause time}) * 5\text{ml/h}$$

Do example:

1. Running time 5s ; pause time: 300s  
Oil consumption =  $5 / (5+300) * 5\text{ml/h} = 0.08\text{ml/h}$
2. Running time 100s, pause time: 200s  
oil consumption =  $100 / (100+200) * 5 = 1.67\text{ml/h}$
3. Running time: 200s, pause time: 200s  
Oil consumption =  $200 / (200+200) * 5\text{ml/h} = 2.5\text{ml/h}$
4. Running time: 300s, pause time 300s  
oil consumption =  $300 / (300+300) * 5\text{ml/h} = 2.5\text{ml/h}$

**Notices**

Running time on app is same meaning with time of event 1 work on display ; Pause time on app is same meaning with time of event 1 pause on display

Oil consumption depend on oil density

## Shortcut button



Press " SET" 5 seconds till hear 4 beeps,  
it will lock on all button to avoid others change,  
and protect your setting;

lock off button via pressing " SET" 5s again.



Press " MODE" 5 seconds till hear 4 beeps, it will  
reset time

Note: It will configure wifi signal for your wifi app when  
pressing " MODE" 5 seconds



Press " UP" 5 seconds till hear 4 beeps.it will try to  
connect bluetooth signal for scent machine.detail  
contact us

### Question & Solution:

1. Why it does not work when we press "MODE" button to reset?

A: please check if you have locked on all button via pressing  
"SET" 5s. please lock off via pressing "SET" 5s again.

2. Why no sound when press "MODE" 5s?

A: please press 5 seconds,not move finger

3. Why can not connect wifi app via pressing "MODE" 5s?

A: detail operation,pls see our wifi handbook.

## How to Do Maintenance



Scent machine



Alcohol (75% / 95%)


### Step as follows:

1. Add much alcohol into bottle of machine, no oil
2. Let machine work 20-30 min
3. Pour out alcohol and refill your oil

### When need do maintance

1. when your machine work about 30 days. need do Maintenance
2. when your scent become small or none


# How to Let Fan Work

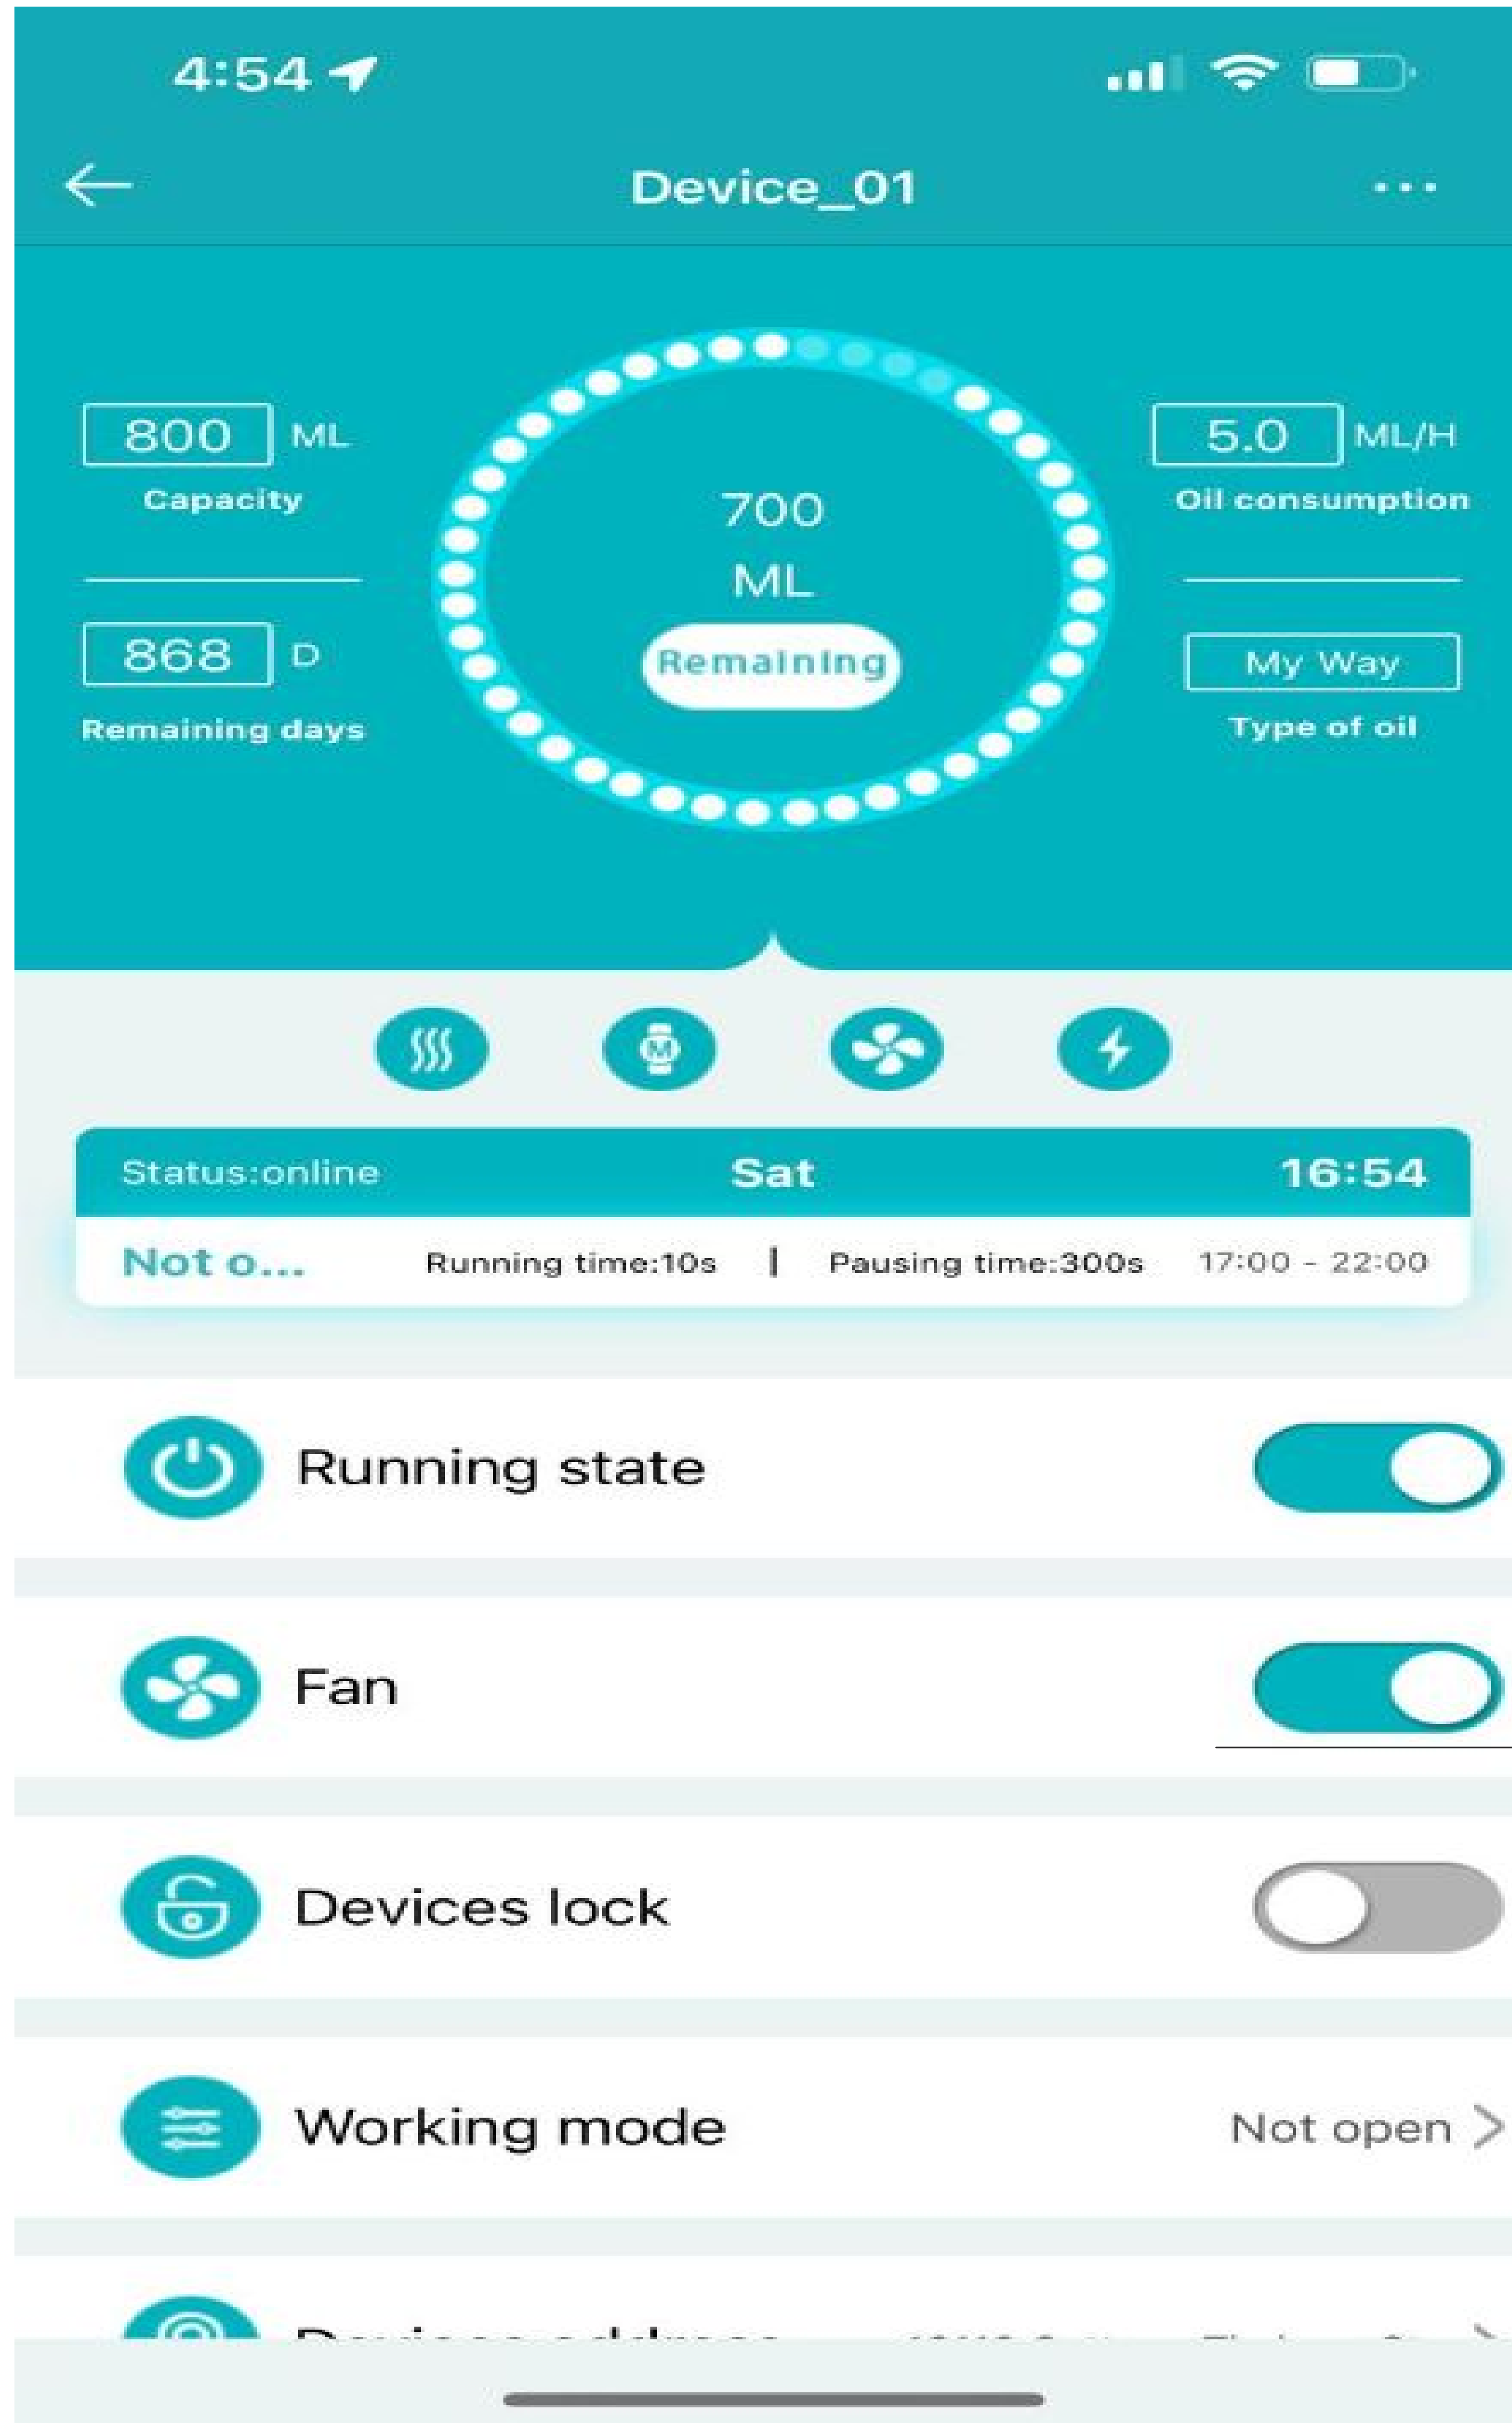

App page

Fan is on

Fan switch is on

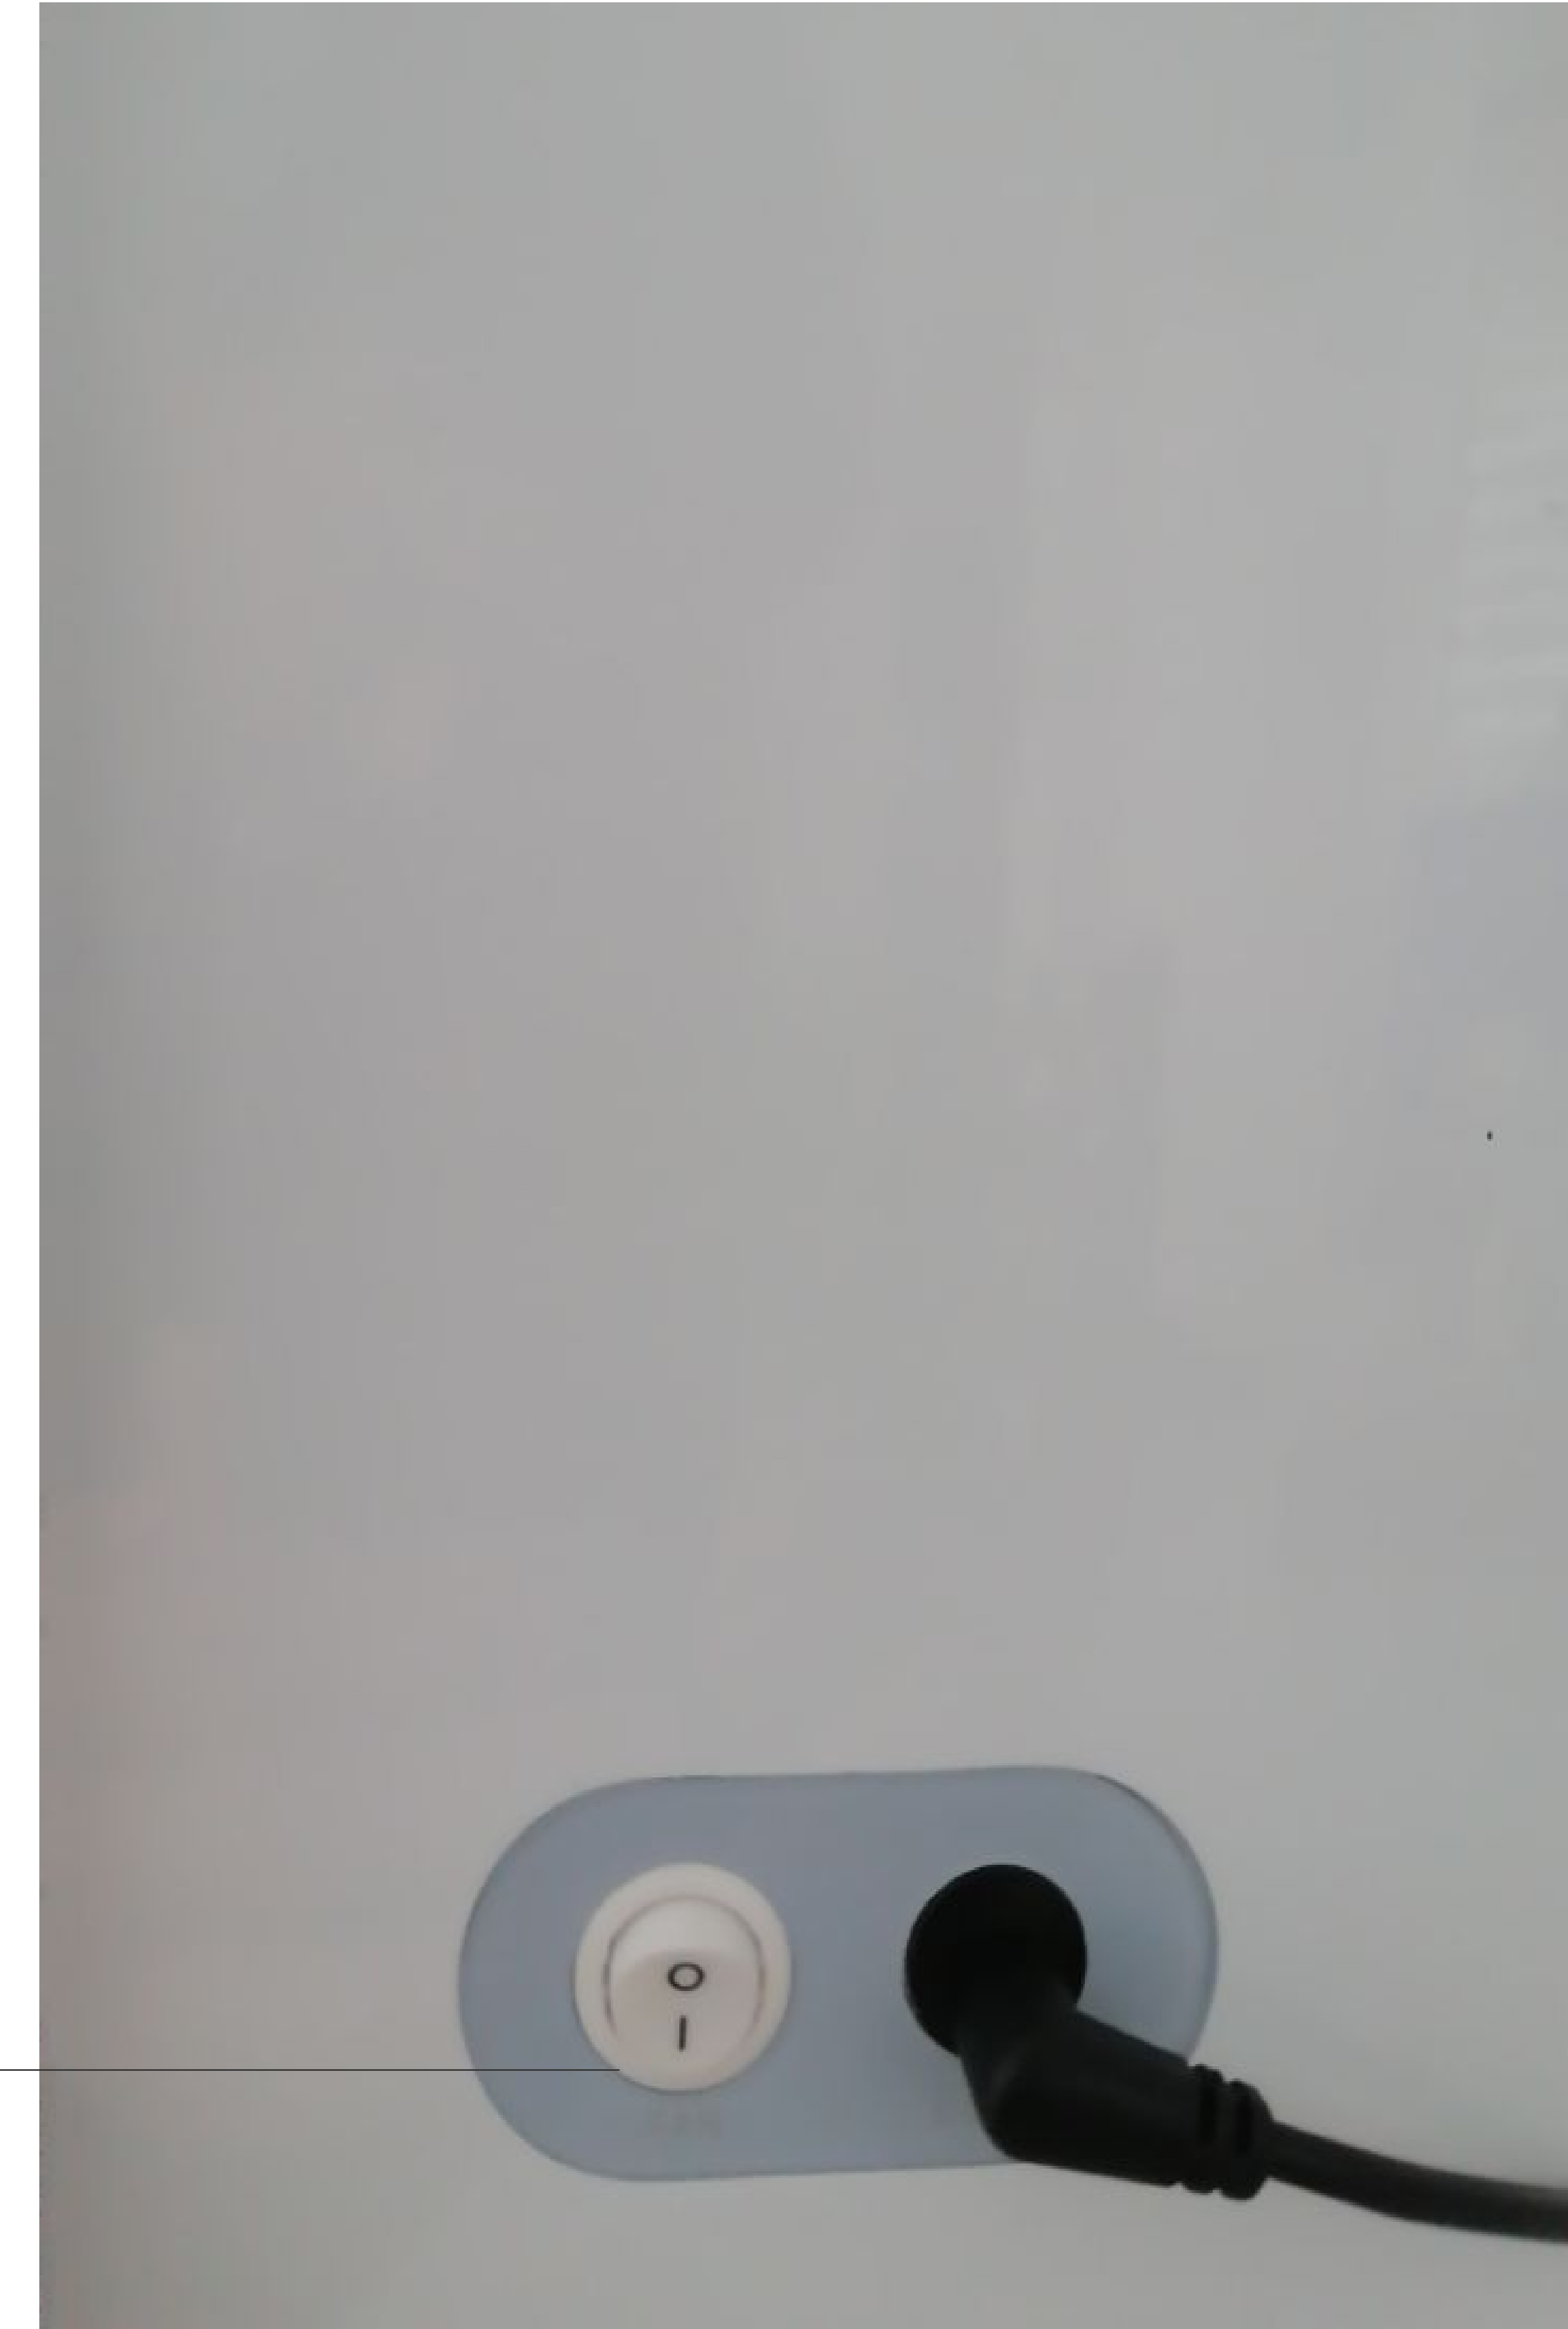

machine body

Only when switch button is on (machine body) and your fan button is on (App page), your machine will work when machine work